

# **PeaPod - Final Report**

NASA/CSA Deep Space Food Challenge Phase 2

**Jayden Lefebvre - Founder, Lead Engineer**  
Port Hope, ON, Canada

**Nathan Chareunsouk - Design Lead**  
Toronto, ON, Canada

**Navin Vanderwert - Design Engineer**  
BASc Engineering Science (Anticipated 2024), University of Toronto, Toronto, ON, Canada

**Jonas Marshall - Electronics Engineer**  
BASc Computer Engineering (Anticipated 2024), Queen's University, Kingston, ON, Canada

Primary Contact Email: [contact@peapodtech.com](mailto:contact@peapodtech.com)

Revision 0.1  
PeaPod Technologies Inc.  
January 10th, 2022

# Contents

<b>1</b>	<b>Summary</b>	<b>3</b>
1.1	Process Description . . . . .	3
1.1.1	Setup . . . . .	4
1.1.2	Operation . . . . .	4
1.1.3	Maintenance . . . . .	5
1.1.4	Cleaning . . . . .	5
<b>2</b>	<b>Inputs</b>	<b>6</b>
<b>3</b>	<b>Outputs</b>	<b>6</b>
<b>4</b>	<b>Testing Plan</b>	<b>6</b>
4.1	Acceptability of Outputs . . . . .	6
4.1.1	Testing Procedure . . . . .	6
4.1.2	Sample Collection Schedule . . . . .	6
4.2	Safety of Process and Outputs . . . . .	8
4.2.1	Testing Procedure . . . . .	8
4.2.2	Sample Collection Schedule . . . . .	9
4.3	Resource Outputs . . . . .	10
4.3.1	Testing Procedure . . . . .	10
4.3.2	Sample Collection Schedule . . . . .	10
4.4	Reliability and Stability of Outputs . . . . .	11
4.4.1	Testing Procedure . . . . .	11
4.4.2	Sample Collection Schedule . . . . .	11
4.5	Additional Comments . . . . .	12
4.6	Materials . . . . .	13
4.6.1	System . . . . .	13
4.6.2	Inputs . . . . .	24
4.6.3	Outputs . . . . .	24
4.6.4	Maintenance . . . . .	24
4.6.5	Cleaning . . . . .	24
<b>5</b>	<b>Results</b>	<b>25</b>
5.1	Acceptability . . . . .	25
5.2	Safety of Process . . . . .	25
5.3	Safety of Outputs . . . . .	25
5.4	Resource Outputs . . . . .	25
5.5	Reliability and Stability of Outputs . . . . .	25
<b>6</b>	<b>Hazard Analysis and Critical Control Point (HACCP) Plan</b>	<b>25</b>
6.1	Food Production System Description . . . . .	25
6.2	Critical Points . . . . .	28
6.2.1	Critical Point A . . . . .	28
6.3	Standard Test Record . . . . .	28

6.3.1	Purpose and Summary . . . . .	28
6.3.2	Safety and Quality . . . . .	28
6.3.3	Test Processes . . . . .	28
6.3.4	Closeout . . . . .	28
6.4	Materials . . . . .	28
6.4.1	System . . . . .	28
6.4.2	Inputs . . . . .	40
6.4.3	Outputs . . . . .	40
6.4.4	Maintenance . . . . .	40
6.4.5	Cleaning . . . . .	40
6.5	Demonstration and Testing Materials . . . . .	41
<b>7</b>	<b>Terrestrial Application</b>	<b>41</b>
<b>8</b>	<b>Scaling Potential</b>	<b>41</b>

# 1 Summary

## 1.1 Process Description

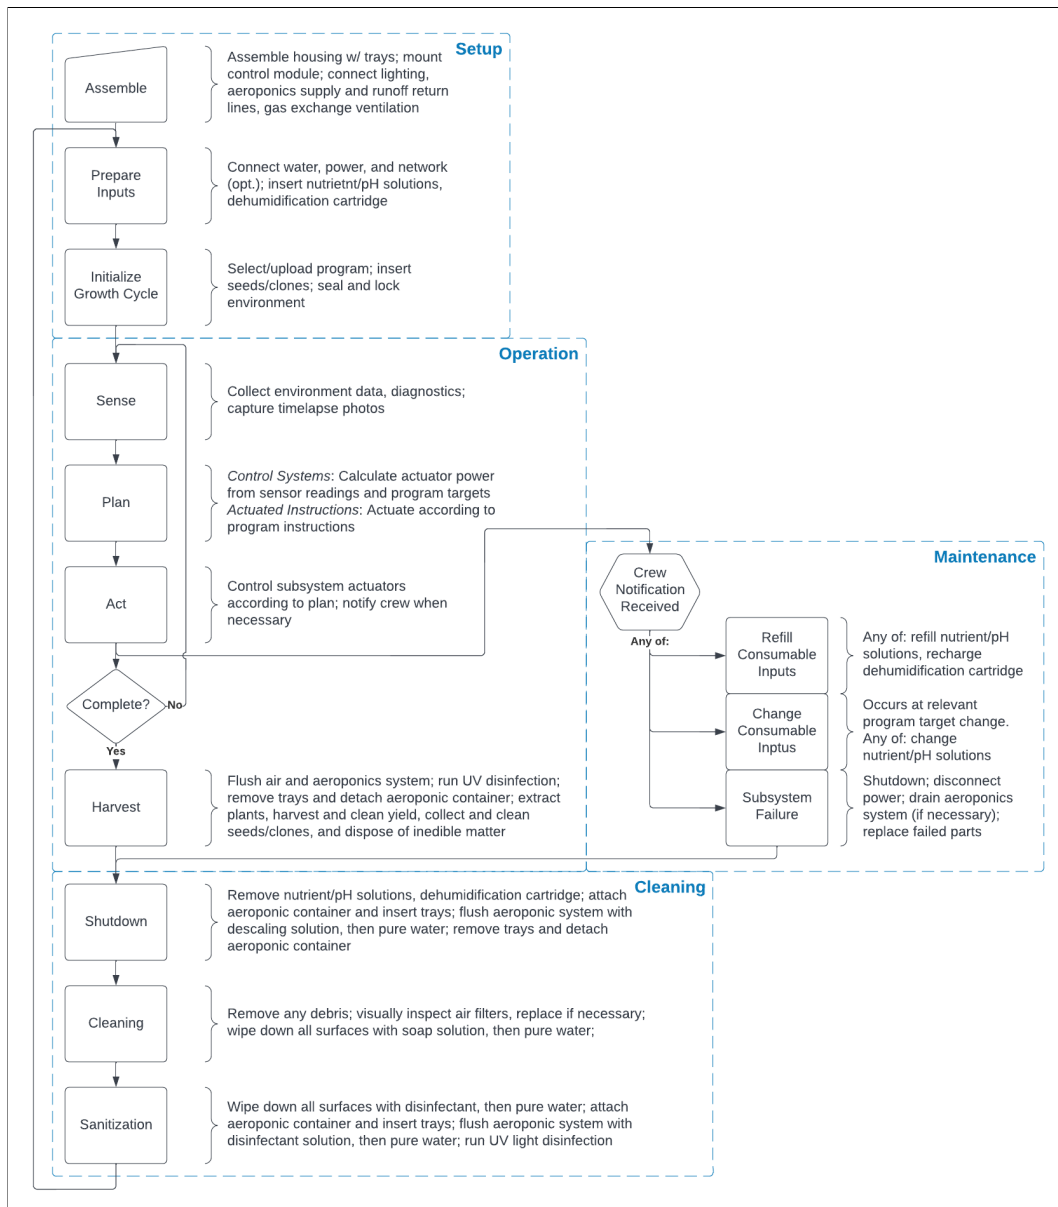


Figure 1: Process diagram.

### 1.1.1 Setup

#### Assembly:

1. Assemble housing, trays (see ??);
2. Mount control module, trays (see ??);
3. Connect subsystems to control module:
  - *Housing Solenoid Lock*: relay (see ??)
  - *Aeroponics Supply & Runoff Collection Lines*: quick-disconnect (see ??)
  - *Lighting Driver Board*: power, control signal (see ??)
4. Connect gas exchange exhaust to ventilation (see ??);

#### Prepare Inputs:

1. Connect supply inputs:
  - *Power*: 120V 60Hz AC (see ??);
  - *Network*: ethernet or wireless, optional (see ??)
  - *Water*: reverse-osmosis, ambient (see ??)
2. Insert consumable inputs:
  - *Nutrient/pH Adjustment Solutions*: pouches (see ??)
  - *Dehumidification Cartridge*: recharged (see ??)

#### Initialize Growth Cycle:

1. Select or upload program;
2. Insert seeds/clones;
3. Seal and lock environment;
4. Start growth cycle;

#### Proceed to Operation (see 1.1.2).

### 1.1.2 Operation

**Sense, Plan, Act** represent the three simultaneous automatic processes of the program's execution (see ??).

**Sense:** Environment data, diagnostic information, and timelapse photos are captured and stored at regular intervals;

#### **Plan:**

*Control Systems:* Actuator controls are calculated from sensor readings and program targets.

*Actuated Instructions:* Actuator controls are derived from program instructions.

**Act:** Subsystem actuators are controlled according to plan. Crew is notified to refill consumable inputs when low, change consumable inputs on program target change, and on any subsystem failure (see 1.1.3), as well as when to harvest and on End of Program (EoP).

**Harvest and/or EoP:**

1. All air is exhausted (automatic, see ??);
2. Flush aeroponics system with pure water (automatic, see ??);
3. Run UV disinfection (automatic, see ??);
4. Unlock and open environment;
5. Remove trays (see ??) and detach aeroponic container (see ??);
6. **If EoP:** Extract plants;
7. Harvest and clean yield;
8. Collect, clean, and store seeds/clones;
9. **If EoP:** Dispose of inedible matter;

**If EoP, proceed to Cleaning (see 1.1.4). Otherwise, seal and lock environment and resume program.**

**1.1.3 Maintenance****Notification Handling:**

- *Refill Consumable Inputs:* includes refilling nutrient/pH adjustment solutions (see ??), recharging the dehumidification cartridge (see ??)
- *Change Consumable Inputs:* includes changing nutrient/pH adjustment solutions (see ??)
- *Subsystem Failure:* all operation stopped, proceed to *Shutdown* (see 1.1.4), disconnect power (see ??), then drain aeroponics system if necessary (see ??) and replace failed components

**1.1.4 Cleaning****Shutdown:**

1. Remove nutrient/pH solutions (see ??), dehumidification cartridge (see ??);
2. Attach aeroponic container (see ??) and insert trays (see ??);
3. Flush aeroponic system with descaling solution (see ??);
4. Flush aeroponic system with pure water (see ??);
5. Remove trays (see ??) and detach aeroponic container (see ??);

**Cleaning:**

1. Visually inspect all surfaces for debris (remove) and components for damage (replace);
2. Visually inspect all air filters (see ??, ??), replace if necessary;
3. Wipe down all surfaces with soap solution;
4. Wipe down all surfaces with pure water;

**Sanitization:**

1. Wipe down all surfaces with disinfectant solution;
2. Wipe down all surfaces with pure water;
3. Dry all surfaces;
4. Attach aeroponic container (see ??) and insert trays (see ??);
5. Flush aeroponic system with disinfectant solution (see ??);

6. Flush aeroponic system with pure water (see ??);
7. Seal and lock environment;
8. Run UV sanitization (??);

**Proceed to Prepare Inputs** (see 1.1.1).

## **2 Inputs**

## **3 Outputs**

## **4 Testing Plan**

### **4.1 Acceptability of Outputs**

#### **4.1.1 Testing Procedure**

Tested via blind studies where participants are divided into two groups and given either control outputs (i.e. established commercial product) or test outputs (i.e. produced by PeaPod). Participants will rate outputs on 4 criteria (appearance, aroma, flavour, and texture) on a 9-point scale.

To simulate acceptability over a long period of time, it will be important to study outputs with consideration for how the subjects will interact with them. This includes varying preparation methods (fresh, cooked, dehydrated, etc.) and preparing combinations of foods both purely with PeaPod outputs and with external foods that would be available in the field.

Blind studies are eminent in consumer testing as they allow researchers to get a completely unbiased dataset. Special care needs to be taken when presenting, preparing, and collecting samples for testing to ensure researchers do not influence results. Ideally, resources will permit a double-blind study where researchers hire an outside entity to conduct the test and return results with generic labels.

The 9-point scale originates from U.S. Army testing, where it was developed using language which has roughly equal psychological distances between points on the scale. While the use of 9 points is otherwise arbitrary, there exists a large history of research validating its analytical use in long-term food production.

#### **4.1.2 Sample Collection Schedule**

To test acceptability of a long-term food solution, it is important to test the entire spectrum of output quality at a good-faith approximation of its distribution. This means instead of testing “good” control outputs against “good” PeaPod outputs, we will need to test batches of control outputs (at a naturally arising quality distribution) vs. batches of PeaPod outputs (again, at a quality distribution). This allows for holistic comparison of the end user experience as opposed to specific comparison of individual items.

To employ statistical analysis, a sample size of at least  $n=30$  will be collected for each crop, with the collection time dependent on the crop. For initial tests, crops will be collected at a developmental

stage roughly equivalent to control crops purchased at a store. For further tests, the crops can be collected at the point PeaPod's analytical tools determine is optimal. Packaging and shipping will be done according to existing best practices, with care to package more than necessary as a factor of safety.



## 4.2 Safety of Process and Outputs

### 4.2.1 Testing Procedure

Given the environment in which PeaPod will operate, process safety will be developed on the foundation of prevention. This is because crisis response and containment is severely limited in the confines of space: identification often requires propagation of the threat, and quarantine is more difficult and loses a larger proportion of food than it does on earth.

This begins pre-flight, as all materials—especially biological—are sanitized, tested, and packaged in isolation so a breach contaminates as little product as possible. Once everything is installed in the field, the design principles of the entire system take over as methods of prevention. By using DfX such as minimal testing and minimal interaction, PeaPod minimizes the introduction of foreign substances and, in turn, the ingress of potential threats. Interaction will only occur at times of harvest and planting, and double as times of cleaning and sanitation. Using established space station procedures, subjects will harvest and clean product, clean all surfaces, sanitize all surfaces, and plant surface-sterilized seeds.

As for non-biological threats such as heavy metals or other toxins, careful selection and sourcing of construction materials will eliminate most threats to the system. As a regular maintenance measure, flushing of the water and air supplies through the space station's recycling system will prevent buildup by keeping them up to external standards.

#### Chemical Hazards

As part of PeaPod's DfX regarding prevention, all sourcing of parts and resources has been done with inherent, chemical threats in mind. As a result, the default construction of the unit poses no threat for chemicals or other toxins to enter the biological system or its surroundings.

The other source of potential threats is during crew interaction steps when they harvest, clean, sanitize, and plant. To protect against hazards, PeaPod's maintenance steps follow carefully designed HACCP protocols and use food-safe cleansers and sanitizers.

#### Biological Hazards

Aerobic Plate Count (APC) testing to be done with the Conventional Plate Count Method outlined in the FDA's BAM Chapter 3: Aerobic Plate Count. This is selected over the Spiral Plate Method as it is inexpensive and uses many household materials. The goal of APC testing is to indicate the bacterial population in food-adjacent sections of the design. Results to be compared against STD-3001 to ensure a maximum of 3000 colony forming units/square ft. Plate count to be minimized by following !CITE (surface cleaning standards? hard to find).

ATP testing to be done using !CITE (lots of stuff about methods but no standards? look at requirements more)

#### Food Outputs

APC testing conducted on samples as outlined above to ensure bacterial population below 20 000 CFU/g per STD-3001. Testing for enterobacteriaceae will be performed using the MicroSnap EB rapid test to ensure its population is below 100 CFU/g per STD-3001. Testing for salmonella will be performed using a rapid detection kit to ensure a population of 0 CFU/g. Testing for yeasts and

molds will be performed with a testing kit to then be analyzed for a population count below 1000 CFU/g.

Critical pathogens to be tested for individually:

- Enterobacteriaceae: 100 CFU/g
- Salmonella: 0 CFU/g
- Yeast and Molds: 1000 CFU/g
- Escherichia Coli: dep. on tech
- Listeria: dep. on tech

## **By-Product Outputs**

### **4.2.2 Sample Collection Schedule**

Safety testing will be conducted in tandem with collection of samples for acceptability, with key metrics being measured as successive rounds of crops are collected. Beyond number and size of samples, it will be critical to follow operating procedures as closely as possible. This is because of its two-fold interaction with crop quality and safety. The only deviation will be the measuring of metrics such as CFU count, as this is safe to do on earth conditions.

Regardless of test results, crop collection will continue to see if the design's mitigation strategies are effective. For example, if Harvest 2 has allowable but present levels of *Enterobacteriaceae*, it is important to see if it persists to Harvests 3 and 4 or if standard cleaning procedures manage to eliminate it.

Then, over the course of 30 or so harvests, the presence of hazards can be charted as a function of harvest number and cleaning cycles, allowing patterns to emerge and weaknesses to be found. Testing for these hazards will be in line with the list above: bacteria via APC, organic residue via ATP testing, and chemical hazards via water supply analysis.

## 4.3 Resource Outputs

### 4.3.1 Testing Procedure

Personally testing nutritional makeup of outputs is far beyond the resources and scope of this project. Instead, a variety of outputs will be produced and shipped to an external, ISO-17025 certified lab such as SGS Canada for testing.

While this is useful for validation on earth, it fails to address the issue of analysis at time of harvest. To tackle this, PeaPod will use data collected on earth-bound trials in combination with lab analysis and existing datasets to develop a way of predicting crop quality during the growing process. By applying algorithmic prediction, we can optimize resource output efficiency by, for example, marking crops that show early signs of failure for replacement. This helps maximize the output to input ratio by cutting losses earlier and with less labour cost than people would be able to.

### 4.3.2 Sample Collection Schedule

The number of days required for sample collection is entirely dependent on what sample is being produced. For one-time growth products, such as carrots or lettuce, the days required is exactly the time to harvest of the plant. Size of collection is dependent on how many units are run at the same time. For plants that produce products multiple times, such as beans or tomatoes, samples should be collected after each production cycle. This means the time required to collect  $n$  samples is  $C + n \cdot X$ , where  $C$  is the initial growth period of the plant and  $X$  the time between harvests. It is important to collect multiple subsequent harvests in order to see the relationship between this and produce quality.

Packaging and shipping will be done according to freight standards of the carrier being used, such as this guide from FedEx.

## **4.4 Reliability and Stability of Outputs**

### **4.4.1 Testing Procedure**

PeaPod's outputs are intended for consumption as soon as possible after harvest and preparation. Any product not immediately consumed post preparation should be stored in an airtight package and kept below 12.5°C to slow bacterial growth. Certain products of PeaPod have the possibility of being dehydrated to further increase their shelf life. To mitigate the need for long duration food storage, growth cycles should be staggered to periodically supply fresh produce when astronauts are ready to eat. (Look into dehydrating processes and shi)

### **4.4.2 Sample Collection Schedule**

Collection time is not a critical variable for this test, however safe storage time is. To quantify it, a variety of outputs can be compared to their control equivalents to identify any disparities in shelf life—be it raw, dehydrated and cooled, or airtight and cooled.

The number of cycles necessary to complete testing will be equivalent to the number of items tested. Each of these three storage methods should be tested for each output over a number of trials to minimize randomness.

Criteria for shelf life will include acceptability as a function of time, quantity/existence of bacteria, and the relationship between crew time and quality of output.

## **4.5 Additional Comments**

## 4.6 Materials

As of May 31st, any false or absent entries are as a result of design and/or prototype incompleteness.

### 4.6.1 System

For a 4x3 extended topology with two control modules:

- 2x Control Module, each comprises:
  - 1x Automation (Tables 44, 29)
  - 1x Aeroponics Supply (Tables 37, 36)
- 12x Housing, each comprises:
  - 1x Housing Shell (Tables 30, 31)
  - 1x Grow Tray, each with:
    - \* 1x Grow Tray Frame (Tables ??, 33)
    - \* 1x Aeroponics Watering System (Tables 38)
  - 1x Lighting Tray (Tables 34, 35)

**Automation**

Part	Description	Quantity	Supplier	Part Number
Motherboard PCB	2 Layers, HASL Finish (Lead-Free)	1	JLCPCB	-

Table 1: Automation subsystem parts.

Part Number	Manufacturer	Description	Quantity
A000005	Arduino	Arduino Nano ATmega328	1
S404GSEJ6-U3000-3	Delkin Devices, Inc.	4GB MicroSD	1
61304021121	Würth Elektronik	Male Header Pins 40POS	1
SC0510	Raspberry Pi	Raspberry Pi Zero 2 W	1
DMN2005K-7	Diodes Incorporated	MOSFET N-CH 20V 300mA	2
RC0603FR-0710KL	YAGEO	Res 10K Ohm 1/10W	5
4484	Adafruit Industries LLC	1.3" TFT Screen	1
5055670271	Molex	Molex Micro-Lock PLUS 2pos	2
5055670471	Molex	Molex Micro-Lock PLUS 4pos	5
5055670871	Molex	Molex Micro-Lock PLUS 8pos	3
5055670681	Molex	Molex Micro-Lock PLUS 6pos	3

Table 2: Automation system electronic components.

## Housing Shell

Part	Description	Quantity	Supplier	Part Number
Control Module Housing	5-Sided Enclosure	1	Protocase	-
Frame Front X	20x20mm, Cut to 500mm	2	McMaster-Carr	5537T101
Frame Door Y	20x20mm, Cut to 500mm	2	McMaster-Carr	5537T101
Frame Rear X	20x20mm, Cut to 460mm	2	McMaster-Carr	5537T101
Frame Door X	20x20mm, Cut to 460mm	2	McMaster-Carr	5537T101
Frame Rear Y	20x40mm, Cut to 460mm	2	McMaster-Carr	5537T111
Frame Front Y	20x20mm, Cut to 460mm	2	McMaster-Carr	5537T101
Frame Z	20x20mm, Cut to 460mm	4	McMaster-Carr	5537T101
Foam Insulation	GPS, 4' x 8' x 1"	1	Home Depot	1001211234
Reflective Laminate	27" x 12' x 0.002"	1	McMaster-Carr	7538T11
Adhesive	LePage PL300 Foamboard	2	Home Depot	1000403469
Door Hinges	Plastic, Black	2	McMaster-Carr	5537T85
Feet Bumpers	Adhesive-Back	4	McMaster-Carr	95495K24
M5x0.8 10mm Bolts	Alloy Steel, Socket Head Cap	44	McMaster-Carr	91290A224
M5 T-Nuts	Zinc-Plated Steel	44	McMaster-Carr	5537T651

Table 3: Housing shell parts.

Part	Quantity	Materials	Process
L Bracket	8	PETG Filament	3D Printing
T Bracket	4	PETG Filament	3D Printing
Feet	4	PETG Filament	3D Printing

Table 4: Housing shell fabricated parts.



Grow Tray

Part	Description	Quantity	Supplier	Part Number
Tray X	20x20mm, Cut to 440mm	2	McMaster-Carr	5537T101
Tray Z	20x20mm, Cut to 400mm	3	McMaster-Carr	5537T101
Nozzle Arm	20x20mm, Cut to 150mm	2	McMaster-Carr	5537T101
M5x0.8 10mm Bolts	Alloy Steel, Socket Head Cap	25	McMaster-Carr	91290A224
M5x0.8 16mm Bolts	Alloy Steel, Socket Head Cap	20	McMaster-Carr	91290A232
M4x0.7 16mm Bolts	Alloy Steel, Socket Head Cap	12	McMaster-Carr	91290A154
M4x0.7 Hex Nuts	High-Strength Steel	12	McMaster-Carr	94166A110
M5 T-Nuts	Zinc-Plated Steel	35	McMaster-Carr	5537T651
M5x0.8 Hex Nuts	Alloy Steel	2	McMaster-Carr	94166A120
Grow Cup	2" Diameter	16	Amazon	

Table 5: Grow tray frame parts.

Part	Quantity	Materials	Process
L Bracket (Grow Tray)	4	PETG Filament	3D Printing
Diagonal Bracket	4	PETG Filament	3D Printing
T Bracket	4	PETG Filament	3D Printing
Tray Hook BL	1	PETG Filament	3D Printing
Tray Hook BR	1	PETG Filament	3D Printing
Tray Hook FL	1	PETG Filament	3D Printing
Tray Hook FR	1	PETG Filament	3D Printing
Grow Plate Quarters	4	210x210x5mm PET Sheet	Table Saw
Grow Plate Washer	1	PETG Filament	3D Printing
Nozzle Mount A	2	PETG Filament	3D Printing
Nozzle Mount B	2	PETG Filament	3D Printing

Table 6: Grow tray fabricated parts.

Lighting Tray

Part	Description	Quantity	Supplier	Part Number
Tray X	20x20mm, Cut to 440mm	2	McMaster-Carr	5537T101
Tray Z	20x20mm, Cut to 400mm	3	McMaster-Carr	5537T101
M5x0.8 10mm Bolts	Alloy Steel, Socket Head Cap	24	McMaster-Carr	91290A224
M5x0.8 16mm Bolts	Alloy Steel, Socket Head Cap	12	McMaster-Carr	91290A232
M4x0.7 16mm Bolts	Alloy Steel, Socket Head Cap	12	McMaster-Carr	91290A154
M4x0.7 Hex Nuts	High-Strength Steel	12	McMaster-Carr	94166A110
M5 T-Nuts	Zinc-Plated Steel	36	McMaster-Carr	5537T651

Table 7: Lighting tray frame components.

Part	Quantity	Materials	Process
L Bracket	4	PETG Filament	3D Printing
T Bracket	2	PETG Filament	3D Printing
Tray Hook BL	1	PETG Filament	3D Printing
Tray Hook BR	1	PETG Filament	3D Printing
Tray Hook FL	1	PETG Filament	3D Printing
Tray Hook FR	1	PETG Filament	3D Printing
Lighting LED Board Mount	5	PETG Filament	3D Printing
Lighting Power Board Mount	1	PETG Filament	3D Printing

Table 8: Lighting tray frame fabricated parts.

## Aeroponics

All parts are rated for over 100PSI.

### Supply

Part	Description	Quantity	Supplier	Part Number
3/8" ID Tubing	1/2" OD, 10', PET	1	McMaster-Carr	1979T3
1/4" OD Tubing	1/8" ID, 25', PET	1	McMaster-Carr	1979T4
PTFE Tape	1/2" x 21' Roll, White	1	McMaster-Carr	4934A14
SAE #6 Hose Clamp (Pack of 10)	7/32" to 5/8", Steel	1	McMaster-Carr	5415K11
Bonded O-Rings for 1/2 BSPP	Nitrile Rubber and Steel	5	McMaster-Carr	50915K816
Grip-Lock Socket to 1/2 MPT	Zinc-Plated Steel	1	McMaster-Carr	6539K37
Grip-Lock Plug to 1/2 MPT	Zinc-Plated Steel	1	McMaster-Carr	6539K67
Shutoff Valve	Brass, 1/2 FPT	2	McMaster-Carr	47865K23
1/2 MPT to 3/8" Barb	Brass	1	McMaster-Carr	2838N23
Diaphragm Pump	4.1L/min @80PSI	1	Amazon	
3/8 MPT to 3/8" Barb	Aluminum	1	McMaster-Carr	5357K37
1/2 FPT to 3x 3/8 FPT Manifold	Aluminum, Heat Block	1	McMaster-Carr	3491N13
3/8 MPT Manifold Plug	Aluminum	2	McMaster-Carr	3867T364
1/2 MPT to 3/8" Barb	Aluminum	1	McMaster-Carr	5357K38
3/8 MPT to 3/8" Barb	Brass	1	McMaster-Carr	2838N22
3/8 FPT Elbow	Brass	2	McMaster-Carr	50785K37
3/8 MPT to 6 1/4" Push Connect	Solution Manifold	2	McMaster-Carr	5203K956
1/4" Push Connect Tee	Plastic	6	McMaster-Carr	5111K528
1/4" Push Connect Plug	Plastic	6	McMaster-Carr	5111K504
3/8 NPT Right-Angle Tee	Brass	1	McMaster-Carr	50785K223
1/2 FPT to 3/8 MPT Adapter	Brass	1	McMaster-Carr	50785K29
Accumulator Tank	0.75L	1	Amazon	
1/2 FPT to 1/2 M BSPP Adapter	Brass	1	McMaster-Carr	1786N138
1/2 BSPP Tee	Brass	1	McMaster-Carr	9151K272
1/2 BSPP Nipple	Brass	1	McMaster-Carr	9151K375
1/2 F BSPP to 1/2 MPT Adapter	Brass	1	McMaster-Carr	50785K608
1/2 FPT to 1/4" OD Compression	Brass	1	McMaster-Carr	51875K14

Table 9: Aeroponics supply parts.

Part Number	Manufacturer	Description	Quantity
SEN0257	DFRobot	Water Pressure Sensor	1
GE-2158	Amphenol Thermometrics	Water Temperature Sensor	1
996	Adafruit Industries LLC	Solenoid Valve	1
114991171	Seeed Technology Co., Ltd	Water Flow Sensor	1

Table 10: Aeroponics supply electronic components.

Watering System

Part	Description	Quantity	Supplier	Part Number
1/4" Compression Quick-Disconnect	Plastic	2	McMaster-Carr	5012K122
1/4" Push Connect 1/8 MPT Inline Tee	Plastic and Brass	1	McMaster-Carr	51235K147
1/4" Push Connect to 1/8 MPT Elbow	Plastic and Brass	1	McMaster-Carr	51235K127
1/8 FPT Straight Coupling	Brass	2	McMaster-Carr	50785K91
80-Degree Full-Cone Misting Nozzle	Brass, 1/8 MPT	2	McMaster-Carr	3178K75
Dyneema Composite	1.43oz, 0.5x1.5yd	3	Ripstop by the Roll	
Dyneema Pressure-Sensitive Adhesive	1/2" x 15'	3	Ripstop by the Roll	
Drawstring	Nylon Cord, 25'	1	McMaster-Carr	3696T38
Drawstring Lock	Slide-Release	1	McMaster-Carr	3734T4

Table 11: Grow tray watering system parts.

Dosage Pump

Part	Description	Quantity	Supplier	Part Number
M4x0.7 16mm Bolts	Alloy Steel, Socket Head Cap	4	McMaster-Carr	91290A154
M4x0.7 4mm Bolts	18-8 Stainless, Socket Head Cap	2	McMaster-Carr	91292A023
Nylon Washer	Lubricated, 15mm x 28mm	2	McMaster-Carr	91545A510
Ball Bearing	Sealed, Stainless Steel	3	McMaster-Carr	6138K65
3/16" OD Tubing	1/16" ID, 10', Tygon PVC	1	McMaster-Carr	6516T62

Table 12: Dosage pump parts.

Part	Quantity	Materials	Process
Pump Body Lower	1	PETG	3D Printing
Pump Body Upper	1	PETG	3D Printing
Pump Roller Lower	1	PETG	3D Printing
Pump Roller Upper	1	PETG	3D Printing

Table 13: Dosage pump fabricated parts.

Part Number	Manufacturer	Description	Quantity
918	Adafruit	12V Geared Stepper Motor	1

Table 14: Dosage pump electronic components.

**Thermoregulation**Leaf-Zone Heat Pump*Incomplete.* Missing: heat sink.

Part Number	Manufacturer	Description	Quantity
CP854345H	CUI Devices	77W Peltier, 8.5A	1
2857	Adafruit Industries LLC	Humidity & Temperature Sensor	2
FAD1-12025CBHW12	Qualtek	12VDC Axial Fan	2

Table 15: Leaf-zone heat pump electronic components.

Root-Zone Heat Pump*Incomplete.* Missing: heat sinks.

Part Number	Manufacturer	Description	Quantity
CP854345H	CUI Devices	77W Peltier, 8.5A	1
FAD1-12025CBHW12	Qualtek	12VDC Axial Fan	1

Table 16: Root-zone/aeroponics heat pump electronic components.

Driver Board

Part	Description	Quantity	Supplier	Part Number
Thermoelectric Driver PCB	2 Layers, HASL Finish (Lead-Free)	1	JLCPCB	-

Table 17: Thermoelectric driver parts.

Part Number	Manufacturer	Description	Quantity
2N6388G	onsemi	NPN Darlington 80V 10A	1
LM324N	Texas Instruments	OPAMP 4-circuit	1
0436450200	Molex	Molex Micro-Fit 2pos	1
0436500201	Molex	Molex Micro-Fit 2pos	1
0462355002	Molex	20-24AWG Crimp	2
G5LE-14 DC3	Omron Electronics Inc	Relay SPDT 10A 3V	2
MMBT2222A-7-F	Diodes Incorporated	NPN 40V 0.6A	4
5055670681	Molex	Molex Micro-Lock PLUS 6pos	1
KLDX-0202-A-LT	Kycon, Inc.	Barrel Jack	1
KLDX-PA-0202-A-LT	Kycon, Inc.	Barrel Jack	1
RC0402JR-0710KL	YAGEO	Res 10k Ohm 5% 1/16W	5
CL05A104KA5NNNC	Samsung Electro-Mechanics	Cap Cer 0.1uF 25V X5R	1
RC0402JR-071KL	YAGEO	Res 1k Ohm 5% 1/16W	4
RC0402FR-071M6L	YAGEO	Res 1.6M Ohm 1% 1/16W	1
RNCP0805FTD20R0	Stackpole Electronics Inc	Res 20 Ohm 1% 1/4W	2
RC0402FR-07100KL	YAGEO	Res 100k Ohm 1% 1/16W	1
RC0402FR-07200KL	YAGEO	Res 200k Ohm 1% 1/16W	1

Table 18: Thermoelectric driver electronic components.

**Humidification**

*Incomplete.* Missing: Humidification driver PCB, driver components, piezoelectric mesh nebulizer disc, water tank.

**Dehumidification**

*Incomplete.* Missing: Housing parts, shutters and servos, cartridge parts.

Part Number	Manufacturer	Description	Quantity
FAD1-12025CBHW12	Qualtek	12VDC Axial Fan	2
1334	Adafruit Industries LLC	Color Sensor	1

Table 19: Dehumidification electronic components.

Part	Description	Quantity	Supplier	Part Number
Indicating Desiccant	Silica Gel, 6%, Blue to Pink, 1lb	1	McMaster-Carr	2181K93
Air Filter	PET, MERV 13, 0.3 micron, 10" x 10"	2	McMaster-Carr	3881T101

Table 20: Dehumidification parts.

**Gas Composition Regulation and Exchange**

*Incomplete.* Missing: Housing parts, shutters and servos.

Part Number	Manufacturer	Description	Quantity
FAD1-12025CBHW12	Qualtek	12VDC Axial Fan	2

Table 21: Gas exchange electronic components.

Part	Description	Quantity	Supplier	Part Number
Air Filter	PET, MERV 13, 0.3 micron, 10" x 10"	2	McMaster-Carr	3881T101

Table 22: Gas exchange parts.

## Lighting

Part Number	Name	Description	Quantity
0451110600	Molex	MicroLock PLUS Cable 6pos 50mm	2
0451110605	Molex	MicroLock PLUS Cable 6pos 450mm	4

Table 23: Lighting subsystem cables.

Part	Description	Quantity	Supplier	Part Number
Lighting LED PCB	2 Layers, HASL Finish (Lead-Free)"	5	JLCPCB	-
Lighting Driver PCB	2 Layers, HASL Finish (Lead-Free)"	1	JLCPCB	-

Table 24: Lighting subsystem PCBs.

## Driver Board

Part Number	Manufacturer	Description	Quantity
LDD-500HS	MEAN WELL USA Inc.	0-500mA Constant-Current LED Driver	5
5055670681	Molex	Micro-Lock PLUS 6pos	3
KLDX-PA-0202-A-LT	"Kycon, Inc."	Barrel Plug	1
KLDX-0202-A-LT	"Kycon, Inc."	Barrel Jack	1
RC0402JR-0710KL	YAGEO	Res 10k Ohm 1/16W	5

Table 25: LED driver electronic components.

## LED Board

*Incomplete.* Missing: UV LEDs.

Part Number	Manufacturer	Description	Quantity
XPGDRY-L1-0000-00501	CreeLED, Inc.	Royal Blue LED (451nm)	3
XPGDWT-01-0000-00ME2	CreeLED, Inc.	Cool White LED (5700K)	3
XPGDWT-H1-0000-00GE8	CreeLED, Inc.	Warm White LED (2700K)	3
XPGDPR-L1-0000-00F01	CreeLED, Inc.	Photo Red LED (645nm)	3
XPEBFR-L1-0000-00701	CreeLED, Inc.	Infrared LED (730nm)	3
5055670681	Molex	Molex Micro-Lock PLUS 6pos	2

Table 26: LED board electronic components.



## 4.6.2 Inputs

### Supply Inputs

- *Water*: reverse-osmosis, ambient
- *Power*: 120V 60Hz AC<sup>1</sup>
- *Network*: ethernet or wireless, optional
- *Air Intake*: cabin air, filtered

### Consumable Inputs

- *Nutrient/pH Adjustment Solutions*: powder form, vacuum-sealed pouches, specific compound makeup is variable to suit mission requirements
- *Desiccant Cartridge*: recharged
- *Seeds*: cleaned and disinfected, vacuum-sealed

## 4.6.3 Outputs

### Food Outputs

All food outputs are plant matter (leaves, fruits, roots, seeds, etc. dependent on species/preparation method). Species selection is variable to suit mission requirements.

### By-Products & Waste

- *Air Exhaust*: filtered, vented to onboard dehumidification and recirculation
- *Seeds/Clones*: harvested, cleaned, and stored for replanting
- *Inedible Plant Matter*: disposed of

## 4.6.4 Maintenance

### Spare Components

Spares for each component (parts, fabricated parts, assembled PCBs) should be included.

### Tools

For part replacement, a basic hand tool set (hex keys, screwdrivers, adjustable wrench, pipe wrench, utility knife) should be included. For automation debugging, a USB keyboard and mouse should be included. For all electronics, basic rework tools (soldering iron, lead-free solder, wire strippers, etc.) can be included.

## 4.6.5 Cleaning

### Soaps

A food-safe mild soap (such as ) diluted and used.

### Disinfectants

Single-use sterile polyester wipes soaked in a food-safe disinfectant (such as those used currently on the ISS, see below) are used.

---

<sup>1</sup>The power supply can be altered to suit a variety of power inputs (i.e. DC)

Compound	Composition
Octyl Decyl Dimethyl Ammonium Chloride	0.0399%
Dioctyl Dimethyl Ammonium Chloride	0.01995%
Didecyl Dimethyl Ammonium Chloride	0.01995%
Alkyl Dimethyl Benzyl Ammonium Chloride	50% C14, 40% C12, 10% C16
Dimethyl Benzyl Ammonium Chloride	0.0532%

Table 27: Disinfectant solution compound breakdown [?].

## Tools

## 5 Results

### 5.1 Acceptability

### 5.2 Safety of Process

### 5.3 Safety of Outputs

### 5.4 Resource Outputs

### 5.5 Reliability and Stability of Outputs

## 6 Hazard Analysis and Critical Control Point (HACCP) Plan

### 6.1 Food Production System Description

PeaPod uses automated control systems to generate desired environments. These are air thermoregulation, humidity control, LED lighting, and an aeroponics system. They are automated by an onboard computer and housed in a "control module" at the top of the unit. This lets power be "multiplied" for extended PeaPods by adding more control modules in a controller-follower topology.

PeaPod is an automated plant growth environment, comprised of several control systems regulated by an automation and monitoring system within a modular, cubic housing. It can generate any desired environment while collecting data on plant growth and improving yields. Due to the wide range of actuation for each control system's environment parameter, and the extendable housing topology, the growth environment is adaptable to any plant or mission requirements. In addition, plant growth support platforms (with watering system) and lighting systems are built on modular "trays" mounted to the inside of the housing so the user can position plants and lights to accommodate any plant size.

PeaPod's control systems are made of environmental controls (feedback loops with sensors) and plant inputs (set-states):

- *Lighting*: A wide spectrum of LEDs, from IR to UV, with a focus on Photosynthetically Active Radiation (PAR). Dimmable LED drivers enable precision spectrum and intensity control. Efficient, precise emission spectrum, low heat.
- *Aeroponics*: Reverse osmosis (RO) water is pressurized by a pump (with sensor for safety cutoff), brought to temperature, nutrient-dosed and pH-balanced by custom peristaltic pumps (allows for accurate dosing, and prevents backflow under pressure), and forced through nozzles to generate mist. Root zone air temperature is regulated in the same way as the leaf zone system. Exceptions include an aluminum water block (vs internal heat sink and fan) and a single temperature sensor after the block for PID feedback in a flowing system. Runoff water is recycled. Water-efficient (98% less water use than farming), nutrient-efficient (60% less use than farming), no pH/nutrient "feedback" loop or waste water (common in hydroponics), increased root oxygenation.
- *Leaf-Zone Thermoregulation*: Leaf zone air temperature is regulated by a thermoelectric heat pump. Fans blow air over heat sinks connected to either face of a Peltier tile to circulate air and dissipate heat. A Proportionate-Integral-Derivative (PID) control system is informed by temperature sensors, and controls the direction and magnitude of the heat transfer. Low complexity, high safety/reliability, easy to automate (bidirectional, precisely dimmable, PID tuning).
- *Humidity Regulation*: Leaf zone humidity is regulated by a dead-zone bang-bang control system informed by humidity sensors.
  - *Humidification*: RO water is supplied to a tank with a fine mesh piezoelectric disc. A controllable driver circuit oscillates the disk, producing water vapour. Easy to automate.
  - *Dehumidification*: A dry silica gel bead cartridge is covered by servo-actuated "shutters" to control dehumidification. Fans draw humid air through a HEPA filter into the desiccant and back into the growth environment on demand. The beads change color to indicate water saturation. The crew is then notified to swap and "recharge" via evaporation in a standard oven.
- *Gas Composition Regulation and Exchange*: Oxygen and carbon dioxide levels are managed by gas exchange. Input and output ports allow fans to draw air into and out of the system. HEPA filters remove microbes and aerosols, and servo-actuated "shutters" prevent unintended exchange. Gas concentration sensors inform a bang-bang control system for port activation.

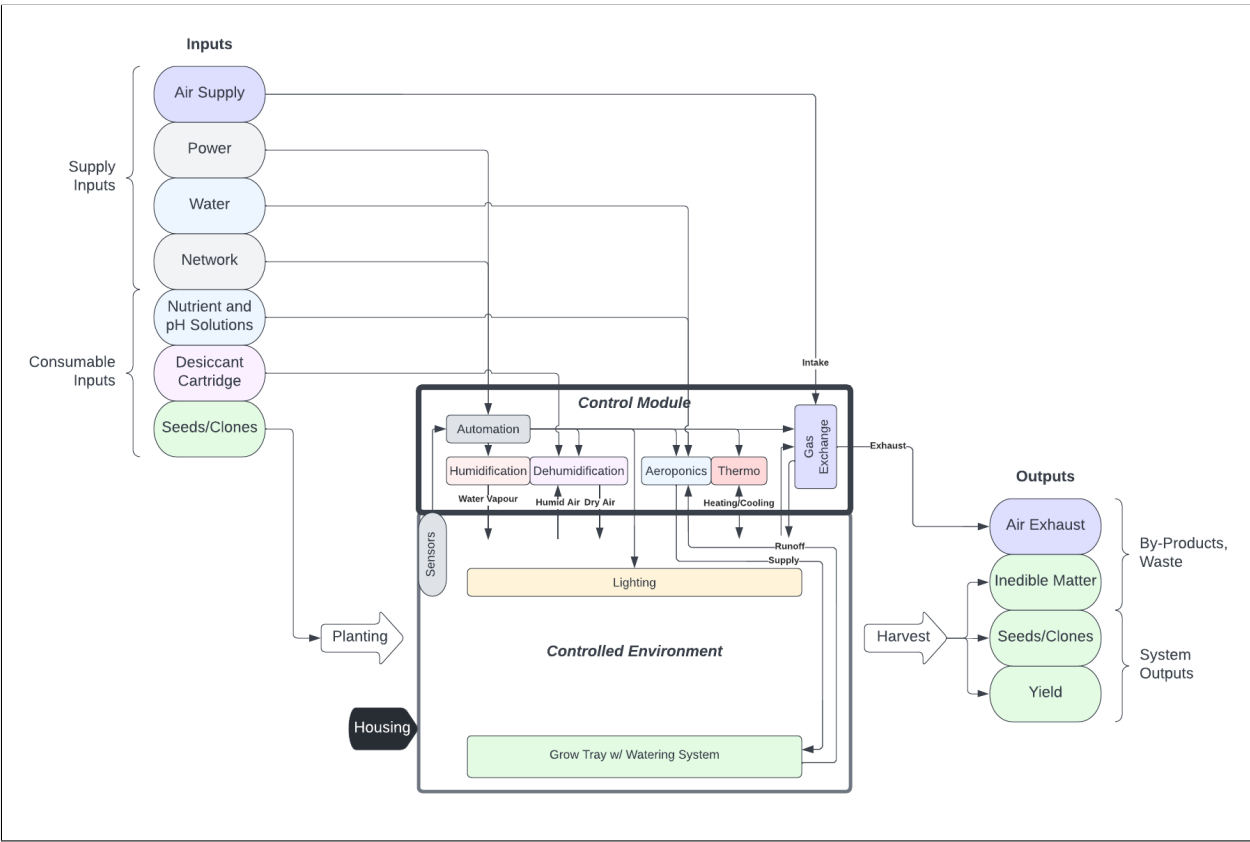


Figure 2: System overview.

## **6.2 Critical Points**

### **6.2.1 Critical Point A**

**Hazard Description**

**Critical Limits**

**Monitoring Procedures**

**Deviation Procedures**

**Associated Documents**

## **6.3 Standard Test Record**

### **6.3.1 Purpose and Summary**

### **6.3.2 Safety and Quality**

### **6.3.3 Test Processes**

**Preparation of Inputs**

**Verification**

**Setup, Maintenance, and Collection Protocols**

**Storage**

**Cleanup and Turnover**

### **6.3.4 Closeout**

## **6.4 Materials**

As of May 31st, any false or absent entries are as a result of design and/or prototype incompleteness.

### **6.4.1 System**

For a 4x3 extended topology with two control modules:

- 2x Control Module, each comprises:
  - 1x Automation (Tables 44, 29)
  - 1x Aeroponics Supply (Tables 37, 36)
- 12x Housing, each comprises:
  - 1x Housing Shell (Tables 30, 31)

- 1x Grow Tray, each with:
  - \* 1x Grow Tray Frame (Tables ??, 33)
  - \* 1x Aeroponics Watering System (Tables 38)
- 1x Lighting Tray (Tables 34, 35)

**Automation**

Part	Description	Quantity	Supplier	Part Number
Motherboard PCB	2 Layers, HASL Finish (Lead-Free)	1	JLCPCB	-

Table 28: Automation subsystem parts.

Part Number	Manufacturer	Description	Quantity
A000005	Arduino	Arduino Nano ATmega328	1
S404GSEJ6-U3000-3	Delkin Devices, Inc.	4GB MicroSD	1
61304021121	Würth Elektronik	Male Header Pins 40POS	1
SC0510	Raspberry Pi	Raspberry Pi Zero 2 W	1
DMN2005K-7	Diodes Incorporated	MOSFET N-CH 20V 300mA	2
RC0603FR-0710KL	YAGEO	Res 10K Ohm 1/10W	5
4484	Adafruit Industries LLC	1.3" TFT Screen	1
5055670271	Molex	Molex Micro-Lock PLUS 2pos	2
5055670471	Molex	Molex Micro-Lock PLUS 4pos	5
5055670871	Molex	Molex Micro-Lock PLUS 8pos	3
5055670681	Molex	Molex Micro-Lock PLUS 6pos	3

Table 29: Automation system electronic components.

## Housing Shell

Part	Description	Quantity	Supplier	Part Number
Control Module Housing	5-Sided Enclosure	1	Protocase	-
Frame Front X	20x20mm, Cut to 500mm	2	McMaster-Carr	5537T101
Frame Door Y	20x20mm, Cut to 500mm	2	McMaster-Carr	5537T101
Frame Rear X	20x20mm, Cut to 460mm	2	McMaster-Carr	5537T101
Frame Door X	20x20mm, Cut to 460mm	2	McMaster-Carr	5537T101
Frame Rear Y	20x40mm, Cut to 460mm	2	McMaster-Carr	5537T111
Frame Front Y	20x20mm, Cut to 460mm	2	McMaster-Carr	5537T101
Frame Z	20x20mm, Cut to 460mm	4	McMaster-Carr	5537T101
Foam Insulation	GPS, 4' x 8' x 1"	1	Home Depot	1001211234
Reflective Laminate	27" x 12' x 0.002"	1	McMaster-Carr	7538T11
Adhesive	LePage PL300 Foamboard	2	Home Depot	1000403469
Door Hinges	Plastic, Black	2	McMaster-Carr	5537T85
Feet Bumpers	Adhesive-Back	4	McMaster-Carr	95495K24
M5x0.8 10mm Bolts	Alloy Steel, Socket Head Cap	44	McMaster-Carr	91290A224
M5 T-Nuts	Zinc-Plated Steel	44	McMaster-Carr	5537T651

Table 30: Housing shell parts.

Part	Quantity	Materials	Process
L Bracket	8	PETG Filament	3D Printing
T Bracket	4	PETG Filament	3D Printing
Feet	4	PETG Filament	3D Printing

Table 31: Housing shell fabricated parts.



Grow Tray

Part	Description	Quantity	Supplier	Part Number
Tray X	20x20mm, Cut to 440mm	2	McMaster-Carr	5537T101
Tray Z	20x20mm, Cut to 400mm	3	McMaster-Carr	5537T101
Nozzle Arm	20x20mm, Cut to 150mm	2	McMaster-Carr	5537T101
M5x0.8 10mm Bolts	Alloy Steel, Socket Head Cap	25	McMaster-Carr	91290A224
M5x0.8 16mm Bolts	Alloy Steel, Socket Head Cap	20	McMaster-Carr	91290A232
M4x0.7 16mm Bolts	Alloy Steel, Socket Head Cap	12	McMaster-Carr	91290A154
M4x0.7 Hex Nuts	High-Strength Steel	12	McMaster-Carr	94166A110
M5 T-Nuts	Zinc-Plated Steel	35	McMaster-Carr	5537T651
M5x0.8 Hex Nuts	Alloy Steel	2	McMaster-Carr	94166A120
Grow Cup	2" Diameter	16	Amazon	

Table 32: Grow tray frame parts.

Part	Quantity	Materials	Process
L Bracket (Grow Tray)	4	PETG Filament	3D Printing
Diagonal Bracket	4	PETG Filament	3D Printing
T Bracket	4	PETG Filament	3D Printing
Tray Hook BL	1	PETG Filament	3D Printing
Tray Hook BR	1	PETG Filament	3D Printing
Tray Hook FL	1	PETG Filament	3D Printing
Tray Hook FR	1	PETG Filament	3D Printing
Grow Plate Quarters	4	210x210x5mm PET Sheet	Table Saw
Grow Plate Washer	1	PETG Filament	3D Printing
Nozzle Mount A	2	PETG Filament	3D Printing
Nozzle Mount B	2	PETG Filament	3D Printing

Table 33: Grow tray fabricated parts.

Lighting Tray

Part	Description	Quantity	Supplier	Part Number
Tray X	20x20mm, Cut to 440mm	2	McMaster-Carr	5537T101
Tray Z	20x20mm, Cut to 400mm	3	McMaster-Carr	5537T101
M5x0.8 10mm Bolts	Alloy Steel, Socket Head Cap	24	McMaster-Carr	91290A224
M5x0.8 16mm Bolts	Alloy Steel, Socket Head Cap	12	McMaster-Carr	91290A232
M4x0.7 16mm Bolts	Alloy Steel, Socket Head Cap	12	McMaster-Carr	91290A154
M4x0.7 Hex Nuts	High-Strength Steel	12	McMaster-Carr	94166A110
M5 T-Nuts	Zinc-Plated Steel	36	McMaster-Carr	5537T651

Table 34: Lighting tray frame components.

Part	Quantity	Materials	Process
L Bracket	4	PETG Filament	3D Printing
T Bracket	2	PETG Filament	3D Printing
Tray Hook BL	1	PETG Filament	3D Printing
Tray Hook BR	1	PETG Filament	3D Printing
Tray Hook FL	1	PETG Filament	3D Printing
Tray Hook FR	1	PETG Filament	3D Printing
Lighting LED Board Mount	5	PETG Filament	3D Printing
Lighting Power Board Mount	1	PETG Filament	3D Printing

Table 35: Lighting tray frame fabricated parts.

## Aeroponics

All parts are rated for over 100PSI.

### Supply

Part	Description	Quantity	Supplier	Part Number
3/8" ID Tubing	1/2" OD, 10', PET	1	McMaster-Carr	1979T3
1/4" OD Tubing	1/8" ID, 25', PET	1	McMaster-Carr	1979T4
PTFE Tape	1/2" x 21' Roll, White	1	McMaster-Carr	4934A14
SAE #6 Hose Clamp (Pack of 10)	7/32" to 5/8", Steel	1	McMaster-Carr	5415K11
Bonded O-Rings for 1/2 BSPP	Nitrile Rubber and Steel	5	McMaster-Carr	50915K816
Grip-Lock Socket to 1/2 MPT	Zinc-Plated Steel	1	McMaster-Carr	6539K37
Grip-Lock Plug to 1/2 MPT	Zinc-Plated Steel	1	McMaster-Carr	6539K67
Shutoff Valve	Brass, 1/2 FPT	2	McMaster-Carr	47865K23
1/2 MPT to 3/8" Barb	Brass	1	McMaster-Carr	2838N23
Diaphragm Pump	4.1L/min @80PSI	1	Amazon	
3/8 MPT to 3/8" Barb	Aluminum	1	McMaster-Carr	5357K37
1/2 FPT to 3x 3/8 FPT Manifold	Aluminum, Heat Block	1	McMaster-Carr	3491N13
3/8 MPT Manifold Plug	Aluminum	2	McMaster-Carr	3867T364
1/2 MPT to 3/8" Barb	Aluminum	1	McMaster-Carr	5357K38
3/8 MPT to 3/8" Barb	Brass	1	McMaster-Carr	2838N22
3/8 FPT Elbow	Brass	2	McMaster-Carr	50785K37
3/8 MPT to 6 1/4" Push Connect	Solution Manifold	2	McMaster-Carr	5203K956
1/4" Push Connect Tee	Plastic	6	McMaster-Carr	5111K528
1/4" Push Connect Plug	Plastic	6	McMaster-Carr	5111K504
3/8 NPT Right-Angle Tee	Brass	1	McMaster-Carr	50785K223
1/2 FPT to 3/8 MPT Adapter	Brass	1	McMaster-Carr	50785K29
Accumulator Tank	0.75L	1	Amazon	
1/2 FPT to 1/2 M BSPP Adapter	Brass	1	McMaster-Carr	1786N138
1/2 BSPP Tee	Brass	1	McMaster-Carr	9151K272
1/2 BSPP Nipple	Brass	1	McMaster-Carr	9151K375
1/2 F BSPP to 1/2 MPT Adapter	Brass	1	McMaster-Carr	50785K608
1/2 FPT to 1/4" OD Compression	Brass	1	McMaster-Carr	51875K14

Table 36: Aeroponics supply parts.

Part Number	Manufacturer	Description	Quantity
SEN0257	DFRobot	Water Pressure Sensor	1
GE-2158	Amphenol Thermometrics	Water Temperature Sensor	1
996	Adafruit Industries LLC	Solenoid Valve	1
114991171	Seed Technology Co., Ltd	Water Flow Sensor	1

Table 37: Aeroponics supply electronic components.

Watering System

Part	Description	Quantity	Supplier	Part Number
1/4" Compression Quick-Disconnect	Plastic	2	McMaster-Carr	5012K122
1/4" Push Connect 1/8 MPT Inline Tee	Plastic and Brass	1	McMaster-Carr	51235K147
1/4" Push Connect to 1/8 MPT Elbow	Plastic and Brass	1	McMaster-Carr	51235K127
1/8 FPT Straight Coupling	Brass	2	McMaster-Carr	50785K91
80-Degree Full-Cone Misting Nozzle	Brass, 1/8 MPT	2	McMaster-Carr	3178K75
Dyneema Composite	1.43oz, 0.5x1.5yd	3	Ripstop by the Roll	
Dyneema Pressure-Sensitive Adhesive	1/2" x 15'	3	Ripstop by the Roll	
Drawstring	Nylon Cord, 25'	1	McMaster-Carr	3696T38
Drawstring Lock	Slide-Release	1	McMaster-Carr	3734T4

Table 38: Grow tray watering system parts.

Dosage Pump

Part	Description	Quantity	Supplier	Part Number
M4x0.7 16mm Bolts	Alloy Steel, Socket Head Cap	4	McMaster-Carr	91290A154
M4x0.7 4mm Bolts	18-8 Stainless, Socket Head Cap	2	McMaster-Carr	91292A023
Nylon Washer	Lubricated, 15mm x 28mm	2	McMaster-Carr	91545A510
Ball Bearing	Sealed, Stainless Steel	3	McMaster-Carr	6138K65
3/16" OD Tubing	1/16" ID, 10', Tygon PVC	1	McMaster-Carr	6516T62

Table 39: Dosage pump parts.

Part	Quantity	Materials	Process
Pump Body Lower	1	PETG	3D Printing
Pump Body Upper	1	PETG	3D Printing
Pump Roller Lower	1	PETG	3D Printing
Pump Roller Upper	1	PETG	3D Printing

Table 40: Dosage pump fabricated parts.

Part Number	Manufacturer	Description	Quantity
918	Adafruit	12V Geared Stepper Motor	1

Table 41: Dosage pump electronic components.

**Thermoregulation**Leaf-Zone Heat Pump*Incomplete.* Missing: heat sink.

Part Number	Manufacturer	Description	Quantity
CP854345H	CUI Devices	77W Peltier, 8.5A	1
2857	Adafruit Industries LLC	Humidity & Temperature Sensor	2
FAD1-12025CBHW12	Qualtek	12VDC Axial Fan	2

Table 42: Leaf-zone heat pump electronic components.

Root-Zone Heat Pump*Incomplete.* Missing: heat sinks.

Part Number	Manufacturer	Description	Quantity
CP854345H	CUI Devices	77W Peltier, 8.5A	1
FAD1-12025CBHW12	Qualtek	12VDC Axial Fan	1

Table 43: Root-zone/aeroponics heat pump electronic components.

Driver Board

Part	Description	Quantity	Supplier	Part Number
Thermoelectric Driver PCB	2 Layers, HASL Finish (Lead-Free)	1	JLCPCB	-

Table 44: Thermoelectric driver parts.

Part Number	Manufacturer	Description	Quantity
2N6388G	onsemi	NPN Darlington 80V 10A	1
LM324N	Texas Instruments	OPAMP 4-circuit	1
0436450200	Molex	Molex Micro-Fit 2pos	1
0436500201	Molex	Molex Micro-Fit 2pos	1
0462355002	Molex	20-24AWG Crimp	2
G5LE-14 DC3	Omron Electronics Inc	Relay SPDT 10A 3V	2
MMBT2222A-7-F	Diodes Incorporated	NPN 40V 0.6A	4
5055670681	Molex	Molex Micro-Lock PLUS 6pos	1
KLDX-0202-A-LT	Kycon, Inc.	Barrel Jack	1
KLDX-PA-0202-A-LT	Kycon, Inc.	Barrel Jack	1
RC0402JR-0710KL	YAGEO	Res 10k Ohm 5% 1/16W	5
CL05A104KA5NNNC	Samsung Electro-Mechanics	Cap Cer 0.1uF 25V X5R	1
RC0402JR-071KL	YAGEO	Res 1k Ohm 5% 1/16W	4
RC0402FR-071M6L	YAGEO	Res 1.6M Ohm 1% 1/16W	1
RNCP0805FTD20R0	Stackpole Electronics Inc	Res 20 Ohm 1% 1/4W	2
RC0402FR-07100KL	YAGEO	Res 100k Ohm 1% 1/16W	1
RC0402FR-07200KL	YAGEO	Res 200k Ohm 1% 1/16W	1

Table 45: Thermoelectric driver electronic components.

**Humidification**

*Incomplete.* Missing: Humidification driver PCB, driver components, piezoelectric mesh nebulizer disc, water tank.

**Dehumidification**

*Incomplete.* Missing: Housing parts, shutters and servos, cartridge parts.

Part Number	Manufacturer	Description	Quantity
FAD1-12025CBHW12	Qualtek	12VDC Axial Fan	2
1334	Adafruit Industries LLC	Color Sensor	1

Table 46: Dehumidification electronic components.

Part	Description	Quantity	Supplier	Part Number
Indicating Desiccant	Silica Gel, 6%, Blue to Pink, 1lb	1	McMaster-Carr	2181K93
Air Filter	PET, MERV 13, 0.3 micron, 10" x 10"	2	McMaster-Carr	3881T101

Table 47: Dehumidification parts.

**Gas Composition Regulation and Exchange**

*Incomplete.* Missing: Housing parts, shutters and servos.

Part Number	Manufacturer	Description	Quantity
FAD1-12025CBHW12	Qualtek	12VDC Axial Fan	2

Table 48: Gas exchange electronic components.

Part	Description	Quantity	Supplier	Part Number
Air Filter	PET, MERV 13, 0.3 micron, 10" x 10"	2	McMaster-Carr	3881T101

Table 49: Gas exchange parts.

**Lighting**

Part Number	Name	Description	Quantity
0451110600	Molex	MicroLock PLUS Cable 6pos 50mm	2
0451110605	Molex	MicroLock PLUS Cable 6pos 450mm	4

Table 50: Lighting subsystem cables.

Part	Description	Quantity	Supplier	Part Number
Lighting LED PCB	2 Layers, HASL Finish (Lead-Free)"	5	JLCPCB	-
Lighting Driver PCB	2 Layers, HASL Finish (Lead-Free)"	1	JLCPCB	-

Table 51: Lighting subsystem PCBs.

Driver Board

Part Number	Manufacturer	Description	Quantity
LDD-500HS	MEAN WELL USA Inc.	0-500mA Constant-Current LED Driver	5
5055670681	Molex	Micro-Lock PLUS 6pos	3
KLDX-PA-0202-A-LT	"Kycon, Inc."	Barrel Plug	1
KLDX-0202-A-LT	"Kycon, Inc."	Barrel Jack	1
RC0402JR-0710KL	YAGEO	Res 10k Ohm 1/16W	5

Table 52: LED driver electronic components.

LED Board

*Incomplete.* Missing: UV LEDs.

Part Number	Manufacturer	Description	Quantity
XPGDRY-L1-0000-00501	CreeLED, Inc.	Royal Blue LED (451nm)	3
XPGDWT-01-0000-00ME2	CreeLED, Inc.	Cool White LED (5700K)	3
XPGDWT-H1-0000-00GE8	CreeLED, Inc.	Warm White LED (2700K)	3
XPGDPR-L1-0000-00F01	CreeLED, Inc.	Photo Red LED (645nm)	3
XPEBFR-L1-0000-00701	CreeLED, Inc.	Infrared LED (730nm)	3
5055670681	Molex	Molex Micro-Lock PLUS 6pos	2

Table 53: LED board electronic components.



## 6.4.2 Inputs

### Supply Inputs

- *Water*: reverse-osmosis, ambient
- *Power*: 120V 60Hz AC<sup>2</sup>
- *Network*: ethernet or wireless, optional
- *Air Intake*: cabin air, filtered

### Consumable Inputs

- *Nutrient/pH Adjustment Solutions*: powder form, vacuum-sealed pouches, specific compound makeup is variable to suit mission requirements
- *Desiccant Cartridge*: recharged
- *Seeds*: cleaned and disinfected, vacuum-sealed

## 6.4.3 Outputs

### Food Outputs

All food outputs are plant matter (leaves, fruits, roots, seeds, etc. dependent on species/preparation method). Species selection is variable to suit mission requirements.

### By-Products & Waste

- *Air Exhaust*: filtered, vented to onboard dehumidification and recirculation
- *Seeds/Clones*: harvested, cleaned, and stored for replanting
- *Inedible Plant Matter*: disposed of

## 6.4.4 Maintenance

### Spare Components

Spares for each component (parts, fabricated parts, assembled PCBs) should be included.

### Tools

For part replacement, a basic hand tool set (hex keys, screwdrivers, adjustable wrench, pipe wrench, utility knife) should be included. For automation debugging, a USB keyboard and mouse should be included. For all electronics, basic rework tools (soldering iron, lead-free solder, wire strippers, etc.) can be included.

## 6.4.5 Cleaning

### Soaps

A food-safe mild soap (such as ) diluted and used.

### Disinfectants

Single-use sterile polyester wipes soaked in a food-safe disinfectant (such as those used currently on the ISS, see below) are used.

---

<sup>2</sup>The power supply can be altered to suit a variety of power inputs (i.e. DC)

Compound	Composition
Octyl Decyl Dimethyl Ammonium Chloride	0.0399%
Dioctyl Dimethyl Ammonium Chloride	0.01995%
Didecyl Dimethyl Ammonium Chloride	0.01995%
Alkyl Dimethyl Benzyl Ammonium Chloride	50% C14, 40% C12, 10% C16
Dimethyl Benzyl Ammonium Chloride	0.0532%

Table 54: Disinfectant solution compound breakdown [?].

## Tools

### 6.5 Demonstration and Testing Materials

## 7 Terrestrial Application

## 8 Scaling Potential

## References